

This is not a toy this is a sports training tool. Children aged 8 years and over may use this product for skill development under the supervision of a coach or responsible adult.



EN

## QUICK GUIDE



Insert batteries.  
Switch on.



Adjust launcher angle.



Wind the handle.  
Load the ball.



2 ways to fire the ball  
A : 5 second auto launch  
B : 3 x clap controlled launch



## FULL INSTRUCTIONS

### 1. SWITCH ON



Insert batteries.  
See packaging for information.



Press and hold.

### 2. SET LAUNCH ANGLE



Unscrew dial anti-clockwise to loosen the locking mechanism.



Use handle to move the launcher into a new firing position.



Choose a launch angle:  
Position 1 = lowest trajectory  
Position 6 = highest trajectory



Turn dial clockwise to tighten.  
Do not over tighten.

### 3. PRIME THE LAUNCHER



To prime the firing mechanism, wind the handle clockwise. Keep going until the green launcher lever is all the way down, flush with the base of the basket. You will hear a loud noise after winding the handle. This is normal.



When primed, the LED changes from red to green.

IMPORTANT: Once the green lever is down, you must insert a ball or discharge the launcher within 30 seconds... otherwise a warning siren sounds.

### 4. LOAD YOUR BALL



Place the ball in the basket.  
Green LED: Ball is ready to fire.  
Red LED: Reposition the ball until the LED turns to green.



IMPORTANT: Once the ball is correctly loaded into the basket, you must discharge the launcher within 2 minutes... otherwise a warning siren sounds.

### 5. LAUNCH YOUR BALL



There are two ways to do this:  
A: Press 5s button to automatically launch the ball after 5 seconds.



B: Press x 3 button, then clap 3 times... green LED will start to flash when the ball is about to launch.



Stand back and get ready to receive the ball.

### ADJUST VOLUME



Press to adjust between high and low volume.

### SWITCH OFF



IMPORTANT: Always eject the ball before switching off. Make sure the green lever is in the UP position or the launcher will not power down.

To switch off press and HOLD the power button for 2 seconds.

## HINTS AND TIPS



**Green LED:** Launcher is working correctly. Await next action.



**Red LED:** The launcher does not recognise the object in the basket. Remove it!



**Green LED / on going beeps:** The ball has been loaded for 2 minutes with no activity. Fire the ball!

If you require more time, you can reset the 2 minute warning beeps by simply repositioning the ball in the basket.



**Red LED / on going beeps:** The green lever has been down for 30 seconds with no activity. Load the ball!



**LED flashing both red and green:** Replace the batteries.

### IS THE GREEN LEVER FULLY DOWN?



Green LED: Launcher is working correctly. Ready to fire.



Red LED: There is a problem. The lever is not at the bottom of the basket. Wind the handle until the LED turns green.

### LAUNCHER WON'T SWITCH ON?



Try replacing the batteries.



**CLEANING:** This product is splash-resistant, but not waterproof. Wipe clean with a damp cloth. Do not pour water into the mechanism.

### IS THE BALL SEATED CORRECTLY?



Green LED: Launcher is working correctly. Ready to fire.



Red LED: There is a problem. Reposition the ball until you see a green LED. Otherwise, your ball may be too light or too small to activate the firing mechanism. Are you using a size 3/4/5 ball?

### DIDN'T LAUNCH THE BALL?



Check the LED status.



Green LED: launcher and ball are ready so try clapping louder. However, if there is too much background noise try moving to a quieter spot, or alternatively fire the ball using the 5 second button.



Red LED: follow the guidelines outlined below.

### DIDN'T LAUNCH THE BALL?



Check the LED status.



Green LED: launcher and ball are ready so try again.



Red LED: follow the guidelines outlined below.

### EJECT LAUNCH LEVER



Hold down both buttons for 5 seconds. You can eject the green lever without the ball if required. However, this is not recommended.



**WARNING:** This could cause injury if not correctly supervised. Ensure hands and fingers are not in the ball basket at any time. Ensure no other objects are in the basket. Adult supervision required.



# SOCCKET LAUNCHER

1003-SS